


Yellow function buttons

**RESET Button** activates the Receiver and the keypad function buttons

Transmitter uses 2 x AAA Alkaline batteries

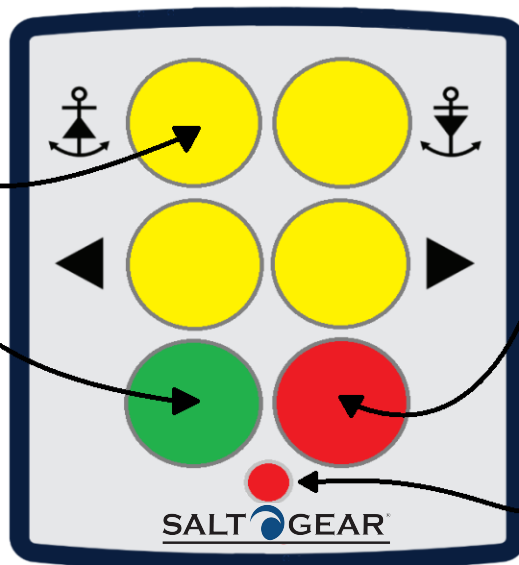

**STOP Button** switches off the Receiver and the keypad function buttons

**L.E.D.** **Blinks** when Transmitter and Receiver are active. **ON** when a Transmitter Button is pressed. **Pulses** while transmitting when battery is low.



### SAFETY FEATURE


The Transmitter sends a STOP signal after 30 minutes; this de-activates both the Receiver and the Transmitter.

To register a TI Transmitter to its Receiver

1. Disconnect the power to the Receiver and briefly PRESS the STOP button on one or both Transmitter(s).
2. Force the Transmitter into registration mode.
  - a. PRESS and HOLD **both** STOP (red) and SET (green) buttons until the LED starts to FLASH (about 5 seconds), then release the buttons.
    - i. What you will see: - FLASH pause, FLASH pause etc.
  - b. If your system only has ONE Transmitter, do not PRESS STOP or SET, **go to instruction 4.**
3. To register a second Transmitter, two can be registered, then choose the memory location.
  - a. The LED identifies location 1 as follows: - FLASH pause etc. The LED identifies location 2 as follows: - FLASH, FLASH pause, FLASH, FLASH pause etc.
  - b. To change memory locations, momentarily PRESS the SET (green) button to move UP one location or PRESS the STOP (red) button to move DOWN one location to achieve the desired memory, do not PRESS STOP or SET again, **go to instruction 4.**
4. To register the Transmitter. Power the Receiver, you now have a 10 second window to PRESS and HOLD the (green) SET button for 5 seconds or until the Receiver STATUS LED is lit continuously.

**PRESS & HOLD both STOP (Red) and SET (Green) for a MINIMUM of 5 SECONDS**

LED = FLASH pause etc.

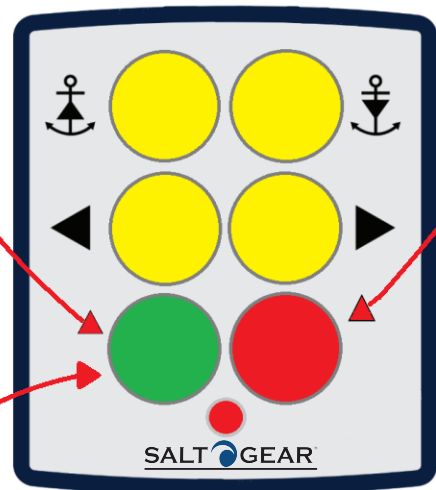

**Then PRESS and HOLD SET for 5 seconds**